
boehlerit

Product information SawTec 2.0





- Cleaning the chip chamber
- Blow out the screw head with compressed air

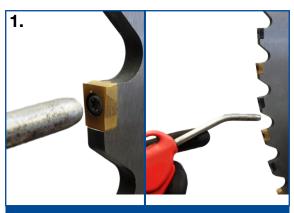





■ If scale or dirt is stuck, use metal clean



■ Carefully remove any dirt from the plate seat with a copper brush







- Blow out the plate seat with compressed air
- Check for damage
- Do not continue to use damaged saw blades



- When inserting the insert, pay attention to the direction of the cutting edge and the correct sequence of the cutting edges!
- To avoid seized screws the use of copper paste is strongly recommended





■ Tighten the screw with a torque of 3.5 Nm

